

Coding of siren for Nexus GW alarm systems

Indoor siren:

1. In the bottom of the siren, please locate a small hole.
2. Please press the button in the small hole. The siren should now light up.
3. If the siren lights up, please press on SOS on your remote. The siren should now start and make a alarm. If you dont have a remote, please press on the tamper switch located on the back of the alarm panel. The tamper switch is a small white button.
4. Press on DISARM on your remote, to end the coding. If you dont have a remote, please use the app to disarm the alarm.
5. Coding complete.

Outdoor siren:

Please see the picture in the buttom.

1. Hold the trigger on number 1.
2. Press the button on number 2 and wait for it to show a light.
3. Press on SOS on the remote. If the panel and strobe siren turn on. Then the coding is complete. Press alarm off to end the coding. If you dont have a remote, please press on the tamper switch located on the back of the alarm panel. The tamper switch is a small white button. Use the app to disable the alarm, when it starts.
4. Coding complete

